

Manual Supplement

 
Manual Title:	ProSim 4 Users	Supplement Issue:	1
Print Date:	January 2011	Issue Date:	11/11
Revision/Date:	2, 9/11	Page Count:	1

This supplement contains information necessary to ensure the accuracy of the above manual. This manual is distributed as an electronic manual on the following CD-ROM:

CD Title:	PromSim 4
CD Rev. & Date:	3, 9/2011
CD PN:	3931519

Change #1

On page 23, under *How to Change the Battery* replace the first paragraph with:

The battery charge level is shown in the upper-right corner of the display when the battery pack is installed in the Product. If the battery charges,  shows in the upper right corner of the display. With the AC/DC power supply removed from the product, the bars in the battery icon shows the charge level.